




**Remi8**  
AI Voice Notes

# Remi8 AI VOICE RECORDER

## INSTRUCTION MANUAL

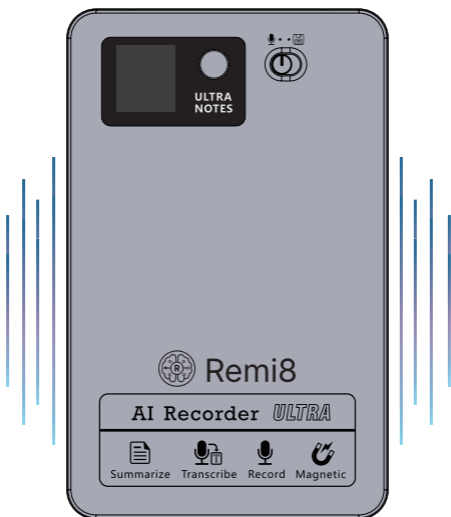


To ensure the best use experience, please read the user manual carefully and keep this manual properly for future reference

### **Help Guide:**

<https://remi8.ai/ai-voice-recorder-help>

## Operation and function description

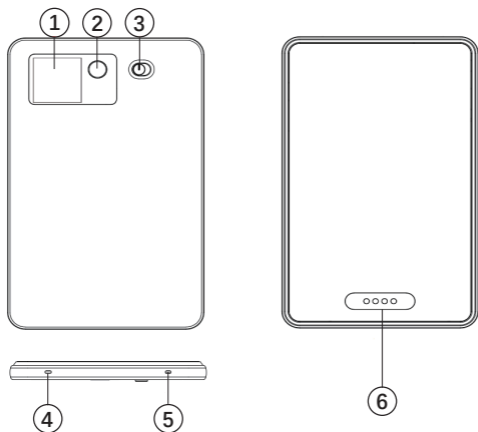

① Display

② Power key

③ Record button


④ Mic hole

⑤ Mic hole

⑥ Magnetic interface

## Operation instruction

**Power on status** Press and hold the power button for 3 seconds to turn on the device.




**Power off status** Press and hold the power button for 3 seconds to shut down the device.




## Standby status

When the screen is light off, short press the power button to light the screen.

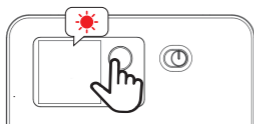

## Start recording

Push the recording button up and the recorder vibrates once, indicating that recording has started.




## Pause recording

Short press the power button to pause while recording.





## End recording

Push the recording button down, the recorder vibrates twice, and the word "save" appears on the display, which means saving and ending the recording.




## Recording mode switching

When the device is powered on and the display screen is lit, double-clicking the power button allows to switch recording mode (CALL: Call recording mode  $\leftrightarrow$  NOTE : normal note recording mode)

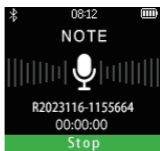
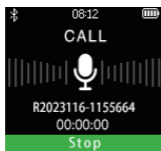


## (1) Bluetooth connect

Open APP search AI Recorder equipment and connect. It needs bluetooth enabled on the Phone device.

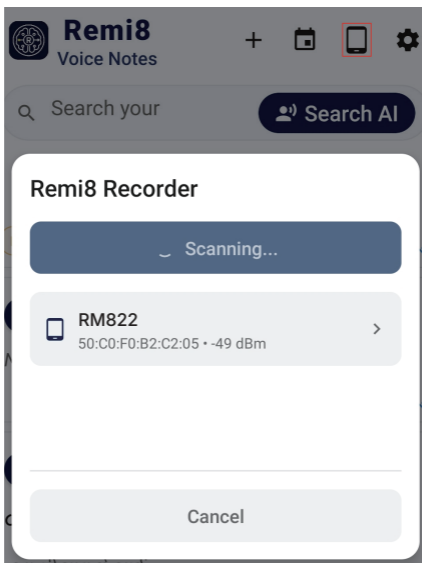

At this time, the Bluetooth connection symbol of the Remi8 RM822 display will change from "📶" to "📶", and the mobile phone synchronizes the data APP management and playback (you can operate the recording, playback and management of the recording file on the mobile APP).



After a successful connection,

- Record the Call or Notes with Record Start / Stop Toggle switch on the Recording Device. On stop recording is saved on recording device.
- Now on App click the Settings (Gear Icon) and Recording List Once the recording is complete, the corresponding recording content will be available in the mobile APP under "Recording List".
- Transcription Language : Option on Remi8 App settings will open dialog to select the preferred language for recording transcription.

The screenshot shows the 'Remi8 Recorder' app interface. At the top, there is a back arrow and the title 'Remi8 Recorder'. Below this is a circular icon containing a smartphone. Underneath the icon, the device name 'RM822' is displayed, followed by its serial number 'S/N: 141887' and MAC address 'MAC: 50:C0:F0:B2:C2:05'. The status 'Connected' is shown at the bottom of this section. A 'Device Info' section follows, listing various metrics:

Category	Value
Total Storage	58.6 GB
Used Storage	1 MB
Available	58.6 GB
Battery	72%
Mode	Note


Status: **Connected**

Device Info :

- Total Storage
- Used Storage
- Available Storage
- Battery Remaining
- Record Mode : Call/Note


## Add Recording as Note & Transcription

Open the APP, for the file you need to transcribe tap "Add to Notes", this will transcribe the recording and add it your knowledge or notes based on the preferred transcription language.

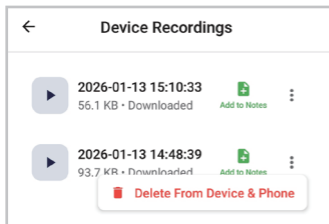

Shows List of Recordings on Device


Can Delete from Device and App

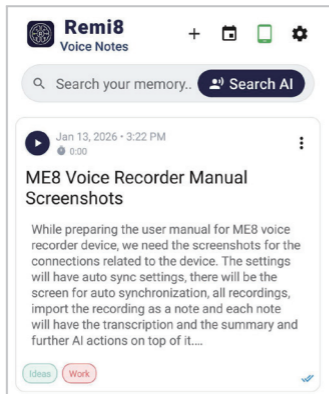

Can Add to Notes to transcribe the selected recording

Select from the list to view detailed Transcription of the Note/ Call Recording.

# Selected Recording Notes Transcription

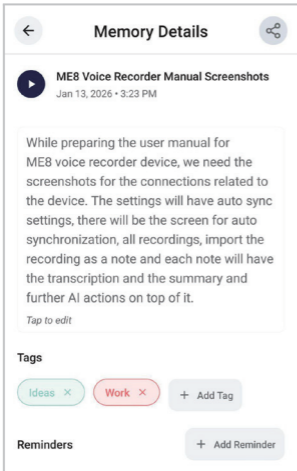

1. Can Share the Notes via email with other users.

2. Add Tags to the Notes. AI will auto-tag based on the Transcribed Notes

3. Reminders are auto-created if the call or notes recording content explicitly discuss the "Remind Me" Phrase for future Date and Time.


4. Capture Photo: Attach photo to the recorded Notes with Phone Camera

5. Gallery : Attach photo from Gallery.


6. Record: attach Sub-recording if additional Voice notes needed to be added to the Call Recording

7. Language Icon 🌐 : Re-Transcribe the recording in desired language.

8. Action : AI Action to Summarize, Create TODO List, Create Email Draft, etc.

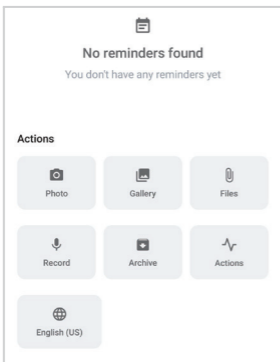

## Major AI Action on Call Recording and Notes Recording.

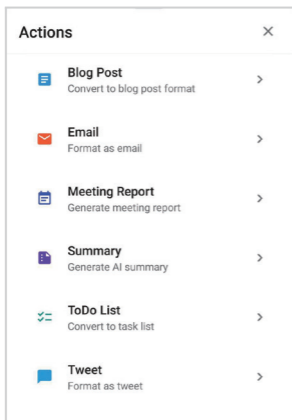

**Based on your recorded audio or notes, Remi8 can adapt content for:**


- **Summaries:** Meetings, calls, speeches, interviews, key takeaways, and oral notes

- **Meetings:** Business meetings, discussions, presentations, technical or family meetings

- **Speeches & Learning:** Speeches, lectures, training sessions, and class notes

- **Calls:** Phone discussions, consultations, and call recordings
- **Interviews:** Interview recordings and structured interview notes
- **Medical:** Consultation notes, SOAP-style summaries, psychotherapy records
- **Sales:** BANT analysis, sales discussions, and client consultations
- **Office Work:** Contracts, project discussions, planning, and copy drafts
- **Consultations:** Customer needs analysis and case-based consultations

## (2) Sharing Remi8 AI Transcribed Notes

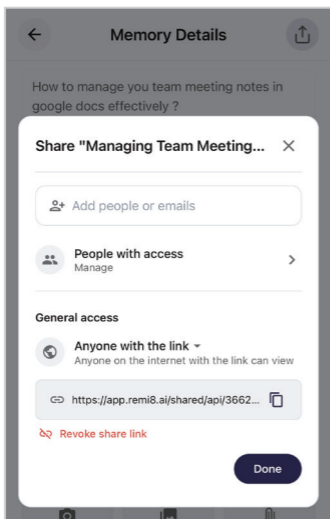

Sharing the Transcribed Notes:

- Share with Email  
Allows typing the contact email and share the AI Call / Note Transcription

- Shows with whom this Note is shared.

General Sharing with LINK

- Copy the Sharable Link and send the link on iMessage, Whatsapp to share notes. The Other user can see the shared note in their browser with link.

Note:

1: When sharing a link, one can revoke the shared Link. Once revoked it will not be accessible by user having that link.

## **(6) APP System upgrade**

Apple and google: Open the automatic upgrade in the APP store. After the app is updated, it will be updated automatically without the need for users to update it manually.

## **(7) Recording storage location and transcription storage location**

When the APP is not connected, the audio files are stored in the memory of the **Remi8 AI Voice Recorder (RM822)**.

When connecting to the APP, the recordings are stored in the Recording Device's memory and the mobile phone APP. (If there are no recordings made when connecting to the APP in the AI Recording Device, they can be downloaded and transferred to the mobile phone APP after connecting to the APP.)

The transcribing other AI Information of recordings is only stored in the mobile phone APP.

## **(8) Charging and data transmission**

Charging method: Connect the magnetic contact of the original data cable to the RM822, and insert the USB-A male plug into a 5V/1A charger.

The connection and usage method of OTG with mobile phones and computers: Connect the magnetic contact of the original data cable to the RM822. First, plug the USB-A male plug into the original OTG adapter, and then plug it into the mobile phone or computer for us.

## Product Information

Model number of products	Remi8 AI voice recorder (RM822)
Cell and combination method	Polymer battery /400mAh/1 piece
Input input interface	Magnetic suction contact
Storage of machine	64GB
Whether the recording is encrypted	no
Recording support format	MP3
Recording bit rate	32kbps
Length of recording	Up to 35 hours
Mode of recording	Start recording on the machine/ start recording on the APP
Power off standby time	About 166 days
Microphone performance	Simulated silicon wheat + bone wheat
Bluetooth protocol	5.3
Transport protocol	USB 2.0
Whole machine material	Aluminum alloy
Operating service temperature	0 to 45 degrees Celsius

## Matters needing attention

### **Legal restrictions**

Please strictly abide by relevant laws and do not use this product illegally. The company does not assume any commitment or responsibility for the consequences of illegal behavior.

### **Privacy Protection**

All data is stored only on the recording device, unless you sync the recording file with the app. In this case, the file will be stored on the smartphone.

### **Data Security**

The company is not responsible for loss or damage of personal data caused by hardware, software, product maintenance, battery replacement or other unexpected circumstances.

### **Product setting**

Due to firmware upgrades, the actual settings and usage of this product may be different from this manual. If product performance and functions change, please refer to the latest product.

### **Security**

Keep the device and accessories out of the reach of children to avoid choking or other injuries. Do not expose the battery (battery pack or installed batteries) to fire or excessive heat (such as sunlight, etc.).

### **Important Notice**

Do not use chemicals or reagents to clean the recorder, as this will damage the surface of the recorder and corrode it.

## **Battery**

If the product is not used for a long time, please charge and discharge the product once every three months to prevent battery damage.

## **Memory storage capacity**

The system software estimates a small amount of storage space. Actual available capacity will be slightly less than what is shown in the specifications.

## **The Management of Low-Power Radio Frequency Radiation Motors**

For low-power radio frequency equipment that has obtained a password certificate, companies, businesses or users are not allowed to change the frequency, increase the power or change the original design characteristics and functions without approval. The use of low-power radio frequency equipment shall not affect flight safety and interfere with legal communications: if interference is found, it should be immediately stopped and can only be used again after improvement to no interference. The legal communication in the preceding paragraph refers to radio communications operating in accordance with the provisions of the Telecommunications Management Act. Low-power radio frequency equipment must withstand interference from legal communications or industrial, scientific and medical radio wave radiating electrical equipment.

## **Radio frequency exposure**

This device has been evaluated to comply with the general RF exposure requirements. This device may be used without restriction in portable exposure condition

## Download the Remi8 App

Scan the QR code below to download the app.



**Apple App Store**



**Android Play Store**



Alternatively Please search "**Remi8 AI Voice Notes**"  
in the iOS Apple App Store Or Android Play Store  
to download the APP.



Made in China

**Folded product  
dimensions  
140x85mm**

**This page is not for  
printing.**